

—**CINETREAK**—

CT-PT25K 3G /CT-PT25K 3G NDI
CT-PT25K 12G/CT-PT25K 12G NDI

USER MANUAL



SHENZHEN CINETREAK INNOVATION TECHNOLOGY CO.,LTD

Video conference camera overview

Preface

Thank you very much for using our color video conference camera. Please read this manual in detail and use accordingly.

This manual introduce the function of video camera, opening and operation principle in detail.

This color video camera is high-quality and flexibility with a remote pan342° /tilt 120° operation and image flip, and a DSP dealing integration module input. Support VISCA and PELCO P/D protocol.

Allowing install on the ceiling /desk and an accurate remote control of RS232/422/485.

Safety requirement

- In order to avoid camera and other connecting equipment damaged and lead to potential danger, please follow the rules as below:
- Only professional technician can install and maintenance;
Prohibit setting on the places which raining or dampness, using unit under stated temperature, humidity and power;
- Using accessories from original factory or allowed;
- Once exchange product or repair happen please use universal meter test before using;
- Please use soft and dry rag for cleaning, not strongly corrosive cleanser for avoiding mangled for outside of camera or lens;
- Take care using and no squeeze crust avoiding camera broken;
- Bracket must be endures 3 times weight of camera at least.

Features

- 4K Ultra HD PTZ camera;
- Pan 342°, Tilt 120°;
- The features include advanced ISP processing algorithms to provide vivid images with a strong sense of depth, high resolution, and fantastic color rendition;
Multi function IR remote controller can control PTZ, lens and other function conveniently;
- Using PC to control camera with Sony Visca or Pelco command;
- IR remote controller, RS422, RS232 and other control method;
- 9 preset positions by remote controller, 200 preset positions by PC or remote control unit, memory auto saved when power off;
- The maximum speed of horizontal rotation: 120° /s, tilt: 120° /s;
- Providing multifunctional accurate remote control.

Packing list

Please check up all devices inside while open package.

Video camera-----	1
Remote controller-----	1
USB cable-----	1
HDMI cable-----	1
Power adapter-----	1
RS232 cable-----	1
Bracket-----	1
User manual-----	1

Remote controller (1)



Video camera (1)



USB cable (1)



HDMI cable (1)



Power adapter (1)



RS232 cable (1)



Bracket (1)



or




(Optional)

User manual (1)




Parts and Introduction

Front


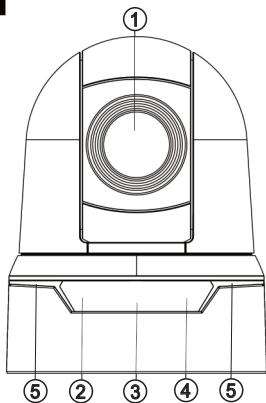


- 1.Lens
- 2.Power lamp
- 3.LCD
- 4.Standby lamp
- 5.Tally lamp

- 6.Sensor for the remote control
- 7.Line-in
- 8.RS-232 IN/OUT
- 9.Tally lamp
- 10.RS-422/485
- 11.Reserved dial code, no function for now
- 12.Power on/off
- 13.Reserved dial code, no function for now
- 14.USB 3.0 video output
- 15.3G-SDI video output
- 16.12G-SDI video output
- 17.HDMI 2.0 video output
- 18.DCIN 12V input
- 19.RJ-45 network output

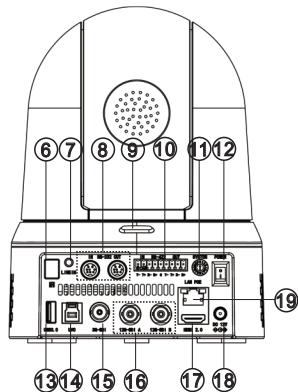


Bottom

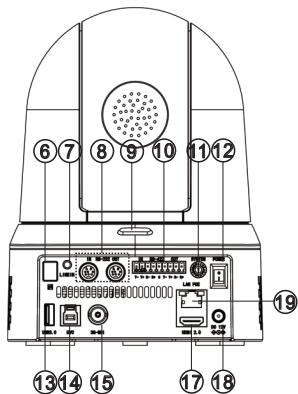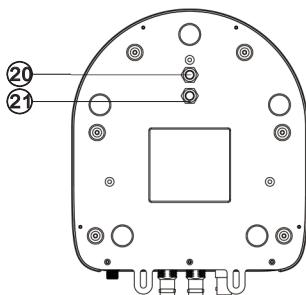

- 20.Local hole
- 21.British screw holes

Remote Controller

- ① IR transmit
- ② POWER
- ③ PAN-TILT RESET
- ④ CAMERA SELECT
- ⑤ POSITION: (Number area; PRESET: press PRESET then press 1-9 for set up preset position)
- ⑥ RESET: (Press RESET and then press 1-9 for eliminate preset position)
- ⑦ MENU
- ⑧ S-OUT: Press and hold for 3 seconds to switch to 720P50 resolution
- ⑨ PAN-TILT ; HOME for return middle position
- ⑩ CLOSE THE MENU
- ⑪ INFO: Screen information display
- ⑫ ON/OFF Smart Control, Reserved buttons have no function
- ⑬ FOCUS: (auto or manual)
- ⑭ ZOOM: (Telephoto or Wide Angle)
- ⑮ F1:Press and hold for 3 seconds to quickly switch the image normal and inversion
- ⑯ F2:Press and hold for 3 seconds to quickly restore the factory settings
- ⑰ F3:Press and hold for 3 seconds to quickly switch the image normal and mirror
- ⑱ F4: Turn ON/OFF the display of detected target selection boxes
- ⑲ Brightness adjustment: bright-/ bright+
- ⑳ BACK LIGHT

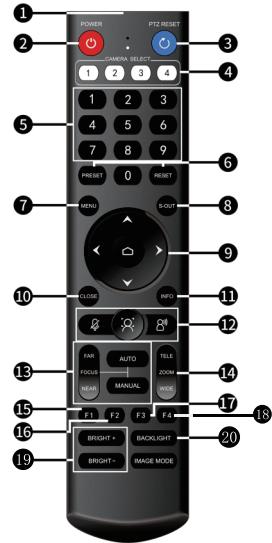


*Infrared address modifying operation (combination buttons):

Press the button ⑩ over 5 seconds, then press F1/F2/F3/F4 to switch infrared address 1/2/3/4 respectively.

After the factory settings are restored through the menu or long press F2, the infrared address does not reset.

VISCA RS-422.

1 2 3 4 5 6 7 8 9

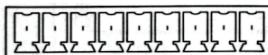


Pin No.	Function
1	TXD -N+
2	TXD +N-
3	RXD - N+ (RS4- 5+)
4	RXD +N- (RS4+5-)
5	GND
6	TXD 0- T+
7	TXD 0+T-
8	RXD 0-T+
9	RXD 0+T-

Attention:

RS-422 and RS-232 can not be used at the same time.

VISCA RS-232

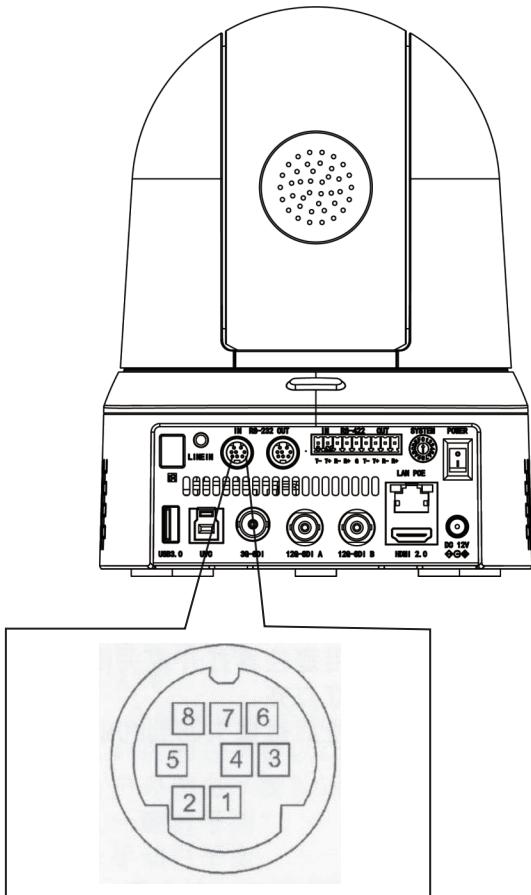

NO	Pins	Signal
1	N.C.	No Connection
2	N.C.	No Connection
3	TXD	Transmit Data(OUTPUT)
4	GND	Ground
5	RXD	Receive Data(INPUT)
6	GND	Ground
7	N.C.	No Connection
8	N.C.	No Connection

The Menu

Due to product iteration, the product menu is subject to change without prior notice, subject to the actual object .

Serial Port

This option can set protocol, address, baud rate, speed grade, speed limit when the camera is communicating through serial port.

PTZ

This option can set PTZ related functions, including digital zoom, focus mode, freezing preset position, focus speed, af zone, zoom speed, remote speed, preset speed, pan reverse, tilt reverse, tally led, etc.

AI Smart

This option can set up AI tracking related functions, including Auto framing, AI tracking, gesture control and other related functions and settings. This menu option is only available for models that support AI functions.

Exposure

This option can set exposure mode including full auto exposure, manual exposure, shutter priority, iris priority, bright priority, etc.

White Balance

This option can set white balance mode including auto, manual, indoor, outdoor, one push, ATW, etc.

Image

This option allows you to set image effects, including 2D/3D noise reduction, contrast, bright, color gain, sharpness, hue, gamma, flip, mirror, etc.

Audio

When this feature is activated, it can output audio signals inputted through LINE-IN.

Video

This option can set the megapixel of camera as well as image mode.

Network

This option can view the network information of the current camera and set the DHCP function on/off

System

This option can set language of camera and IR remote control address bits, review present version and reset default factory settings.

Exit

Exit menu.

MENU	
▶ Serial Port>	PTZ>
AI Smart>	Exposure>
White Balance>	Image>
Image>	Audio>
Video>	Network>
Network>	System>
System>	Exit
◀ Roll	◆ Change
[HOME] Enter	[CLOSE] Back

The Menu

1. Serial Port Settings

Serial Port Settings>	
▶ Protocol:	<Auto>
Address:	<1>
Address Fixed:	<OFF>
Baud Rate:	<9600>
Speed Grade:	<Standard>
Speed By Zoom:	<OFF>
RS-485:	<ON>
Back>	
▲ Roll [HOME] Enter	◀ Change [CLOSE] Back

Serial Port Settings Sub Menu

Protocol: Can set auto/visca/pe1co-p/pelco-d.
Address: Can set camera serial communication address.

Address Fixed: This option is used to cover automatic distributing order under VISCA protocol.

Baud Rate: Can set serial communication baud rate, 2400/4800/9600/ 19200/ 38400/115200.

Speed Grade: Can set speed range of PTZ(only take effect when using serial communication), standard/ expand.

Speed By Zoom: Can set on/off of pan tilt speed and lens magnification linkage.(only take effect when using serial communication)

RS-485: This option can set the camera to enable/disable the RS-485 serial port return code function.

2. PTZ Settings

PTZ Settings>	
▶ DZoom:	<OFF>
Focus Mode:	<Auto>
AF Sensitivity:	<Normal>
Preset freeze:	<OFF>
Focus Speed:	<4>
AF Zone:	<ALL>
Zoom Speed:	<4>
Remote Speed:	<4>
Preset Speed:	<4>
Installation:	<Auto(Normal)>
Reload Preset 1:	<ON>
PAN Reverse:	<OFF>
TILT Reverse:	<OFF>
Tally Led:	<ON>
Back>	Back>
▲ Roll [HOME] Enter	◀ Change [CLOSE] Back

PTZ Settings Sub Menu

DZoom:on/ off

Focus Mode: auto/ manual.

AF Sensitivity: This option is for setting the AF sensitivity of camera, there are 3 levels: low, standard and high levels.

Preset freeze: when it's turned on, the picture will remain frozen during the process of calling preset position, and the real-time image will be recovered after reaching the preset position.

Focus Speed: This option is for setting the focus speed of camera, there are 8 levels.

AF Zone: can set the focus area for key detection, with options of up, center and down.

Zoom Speed: This option is for setting the zoom speed of camera, there are 8 levels: low, standard and high levels.

Remote speed: PTZ speed 1-16(only take effect when using IR remote controller).

Preset Speed: can set the PTZ speed when calling presets, 1-10

Installation: This option can set image flip effect of camera in order to match installation of desktop and ceiling.

Reload Preset: This option can set the function that automatically call number 1 preset position after starting camera.

Pan Reverse: Can set pan direction normal/ reverse.

Tilt Reverse: Can set pan direction normal/ reverse.

Tally Led: Can set tally light on/off.

The Menu

3. AI Smart

AI Smart>

▶ Smart Control:	<OFF>
Smart AppMode:	<AI Tracking>
Gesture Control:	<ON>
Change Track Time:	<6>
Track Mode:	<Mid>
Track Size:	<Custom>
AI Reload:	<OFF>
Back>	
▲ Roll [HOME] Enter	◆ Change [CLOSE] Back

SmartControl

This option can be set to turn on or off the Smart APP. The corresponding tracking mode will take effect only after this option is turned on.

SmartAppMode: This option can switch between Auto Framing and AI Tracking

Gesture_Control: This option can be set to turn on or off the gesture control

Change_Track_Time: When the target is lost for more than the lock time, the camera will return to the initial position

Track Mode: This option can set the area on the screen where the target person will be positioned when AI tracking. You can choose left/middle/right.

Track Size: This option can set the magnified optical zoom frame ratio when AI tracking is turned on. You can choose small/medium/large/custom. When custom is selected, the zoom can be controlled by gestures

AI Reload Preset 1: This option can set whether to call preset No. 1 first when AI is turned on.

4. Exposure Settings

Exposure Settings>

▶ AE Mode:	<Auto>
Backlight:	<OFF>
De-Flicker:	<OFF>
Max Gain:	<5>
Back>	
▲ Roll [HOME] Enter	◆ Change [CLOSE] Back

Exposure Submenu

Auto Exposure: In Auto Exposure mode, the backlight compensation can be adjusted on/off; De-flicker: The camera's refreshed rate can be adjusted in this option, solving the problem of screen flicker caused by light.

Iris priority : Aperture level can be adjusted

Shutter priority: Shutter value can be adjust

Manual exposure: Gain can be adjusted

Max Gain: Limit the max gain range during auto exposure

5. White Balance Settings

White Balance Settings>

▶ WB Mode:	<Auto>
Rgain:	<0>
Bgain:	<0>
Back>	
▲ Roll [HOME] Enter	◆ Change [CLOSE] Back

White Balance Settings Sub Menu

WB Mode: auto, manual, indoor, outdoor, one push, ATW,color temp.

The Menu

6. Image Settings


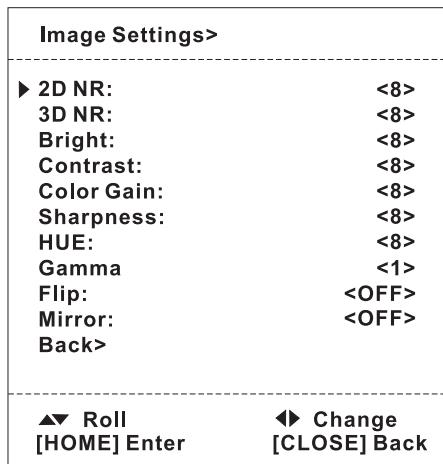


Image Settings Sub menu

2D NR: 2D noise reduction, 0-15.
3D NR: 3D noise reduction, 0-15.
Bright: Can set image bright, 0-15.
Contrast: Can set image contrast, 0-15.
Color Gain: Can set image color gain, 0-15.
Sharpness: Can set image sharpness value, 0-15.
HUE: Can set image color saturation, 0-15.
Gamma: Can set image gamma, 1-15.
Flip: Can set the camera image to flip up and down 180 degrees.
Mirror: Can set the camera image to flip left and right 180 degrees.


7. Audio Settings

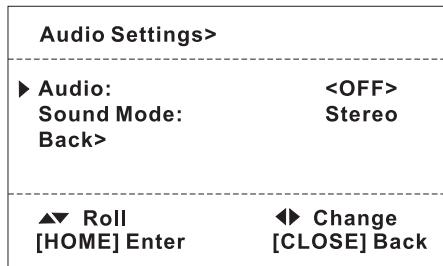

Audio Settings Sub menu

Audio: This option can set the HDMI/SDI audio turn on/off.

8. Video Settings(12G-SDI model)

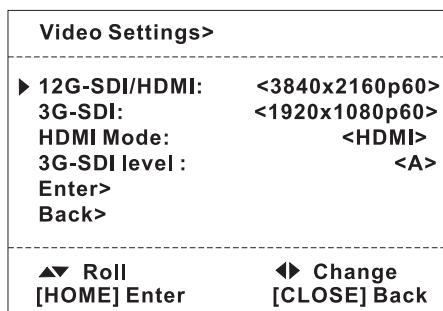


Video Settings Sub menu

12G-SDI/HDMI: This option can set the current resolution and 12G-SDI.
3G-SDI: This option can set the current resolution of the 3G-SDI.
HDMI Mode: This option can set the HDMI/DVI mode.
3G-SDI level: This option can set 3G-SDI level.

The Menu

Video Settings(3G-SDI model)

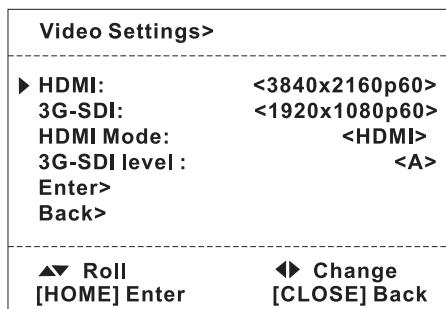

Video Settings Sub menu


HDMI: This option can set the current resolution of the HDMI.

3G-SDI: This option can set the current resolution of the 3G-SDI.

HDMI Mode: This option can set the HDMI/DVI mode.

3G-SDI level: This option can set 3G-SDI level.

9.Network Settings

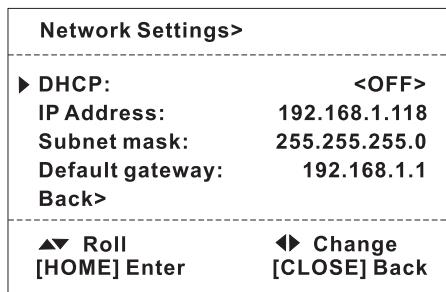


Network Settings Submenu

Can check network information of camera.

Can set DHCP ON/OFF

10.System Settings

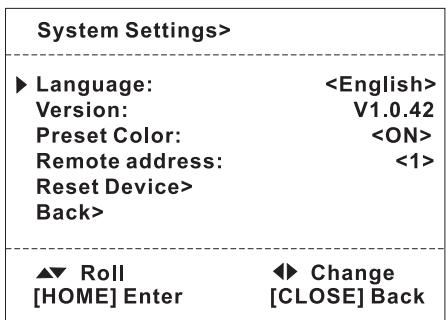

System Settings Sub menu

Language: Camera menu operation language can be set, simplified Chinese/English.

Version: You can view the current software version, which can not be modified.

Preset Color: This option can be used to set the camera to enable/disable the function of saving the image effect in the preset position.

Remote address: Can be set to receive the remote control address channel of the infrared remote control.

Reset Device: You can restore to the default factory settings for all the camera parameters.

Intelligent Application Description

Intelligent applications are currently divided into two types: automatic framing and AI tracking. Automatic framing will automatically adjust the camera according to the number of participants and changes in location, so that all participants are included in the panoramic field of view and the best picture is automatically presented.

AI tracking will accurately identify a single human target in the scene, and can always follow and shoot stably when the target moves, ensuring that the target character is always in the center of the screen.

To use smart applications, you first need to turn on the smart control switch and then select the desired application.

Smart control can be switched on/off via the OSD menu and IR remote shortcut key 

AI Tracking

This function can use the "menu call key" on the remote control to switch to AI tracking in the AI intelligent application. After exiting the menu, the camera PTZ can implement the humanoid tracking function. The camera automatically captures the person information in the picture and adjusts the PTZ angle follow the target in real time. The target is in the center of the screen.

Note: When the tracking function is turned on, it will affect the manual PTZ control function. If you need to switch to manual control, just switch on/off via the OSD menu and IR remote shortcut key 

Auto Framing

This function can use the "menu call key" on the remote control to open the screen OSD menu, and select to switch to "auto framing" in "AI" -"Smart Application", after exiting the menu, the camera will automatically detect the number and position of the people in the picture, and ensure that they are always in the center of the composition.

Gesture Control



Use the OK gesture on the right side of face to turn on the "Smart Control" function. (Equivalent to IR remote shortcut key to open Smart Control. After the Smart control in the menu is turned off, the use of gesture control under the AI submenu function will not be affected.)



Use the palm gesture on the right side of face to turn off the "Smart Control" function.



Use the V gesture on the right side of face, turn on the zoom in function, zoom in to 1x, 2x, max zoom, and keep the gesture to the max zoom. (Zoom in/out gestures only work when the Tracking Size is set to custom mode.)



Use the fist gesture on the right side of face, turn on the zoom out function, zoom out to 1x, 2x, min zoom. Keep the gesture down to the original zoom.



After AI tracking is turned on, use the yeah gesture on the right side of face, and it can switch the tracking target to the person who is making this gesture.

Network Connections

Connection mode

Direct connection mode: connect the camera directly to the computer with a network cable.

Network connection mode: connect the camera to the Internet network, and access the network through a router or switch. Users can log in to the device through the browser.

The computer must have the network segment where the camera IP is located. If the network segment is not added, you will not be able to log in. If the default IP address of the camera is 192.168.1.118, you need to add 1 network segment to the computer. The specific method is as follows :

Firstly open the computer network local connection properties window, select “Internet Protocol Version 4 (TCP/Ipv4)” double click or click the property “Internet Protocol Version 4 (TCP/IPv4)” enter the properties window, click “Advanced” to enter advanced TCP/IP Set the IP address and subnet mask in the IP address field. After the addition is completed, click OK to complete the IP network segment addition. Users can add corresponding network segments according to the modified camera IP address.

Network login

WEB login:

Enter the device IP address in the browser address bar to default to 192.168.1.118, and press Enter to enter the web client login interface. Enter “admin” in the [Username] field, “admin” in the [Password] field, and pass the verification to enter the background preview interface.

Language selection: The selected language can be displayed at the bottom of the login interface.

Preview and pan/tilt

After successful login, enter the management interface, and the default is the video preview interface. On the left side of the preview interface is the image preview area, and on the right side of the preview interface is the pan/tilt control area, which can realize the following functions: tilt to up, tilt to down, pan to left, pan to right, the pan/tilt returns to the initial center position, the lens zooms out, the lens zooms in, the near focus and the far focus are adjusted, the pan/tilt speed level is adjusted, the zoom speed level is adjusted, and the focus mode is adjusted; set the preset number , Number 1 starts counting, which is the No. 1 preset position; save the currently set preset position; delete the corresponding preset position; call the corresponding preset position

Configuration

Click “Configuration” at the top of the interface to enter the software parameter configuration interface, which mainly includes the following options: system, network, audio and video, image, and user management.

Configuration

System

- 1) System settings: display the basic information of the device (not adjustable), time configuration is used to configure the system time;
- 2) System maintenance: can be used for software upgrade, restore factory settings and restart the device.

Internet

1) Basic Configuration.

TCP/IP configuration.

DHCP: Set whether to enable automatic IP acquisition.

IP address: set the IP address, the default is 192.168.1.118, where the IP is the address of the login web page.

Subnet Mask: Set the subnet mask (default is 255.255.255.0).

Default Gateway: Set the default gateway (192.168.1.1 by default).

Preferred DNS Server: Set the DNS server (default is 192.168.1.1).

DNS state selection.

Port Configuration.

HTTP port: Set the HTTP port, the default is 80.

RTSP port: Video Acquisition port, the default is 554.

ONVIF port: Set the ONVIF port, the default is 2000.

Service Port: Set the service port, the default is 90.

2) Advanced configuration.

Configurable SRT, RTMP, RTSP and other related parameters.

Video&Audio

1) Video

Set the Video compression format, the default main/sub stream compression format is H.264/H.265;

Stream: Set different video output modes and select different streams. Including main stream and sub stream, the 4K model main stream can be 3840*2160,1920*1080,1280*720; the sub stream can be 640*480, 640*360, 480*360, 352*288, 320*240 , 176*144;

Video frame rate: set the video frame rate;

Iframe interval: set key frame interval;

Bit rate type: default variable bit rate;

Image quality: Under the condition of variable bit rate, the image quality can be selected;

Bit rate upper limit: 128~50000 optional.

2) Audio

Configure Network Audio.

Configuration

Image

Image parameters The image parameters interface can make the following adjustments to the image effect.

Image adjustment: it can set picture brightness, contrast, saturation, sharpness, chroma, 3D noise reduction and other functions.

Exposure: Exposure mode, shutter speed, gain, aperture, etc. can be set.

Image enhancement: left and right mirroring can be set, up and down mirroring, backlight compensation.

White balance: White balance mode, red and blue gain effect image can be set.


User Administer

Used to modify username and password.

Instructions of Tally under NDI

Instructions of Tally

1. Open VMIX software, add camera NDI signal to VMIX material management area;

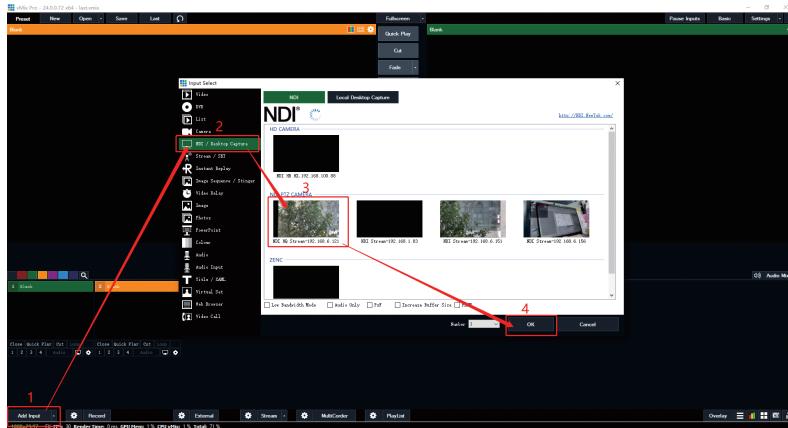


2. When NDI signal source of the camera is in VMIX material management area, tally light is off;




Instructions of Tally under NDI

Instructions of Tally

3. When NDI signal source of the camera is in VMIX PVW window, tally light is green;

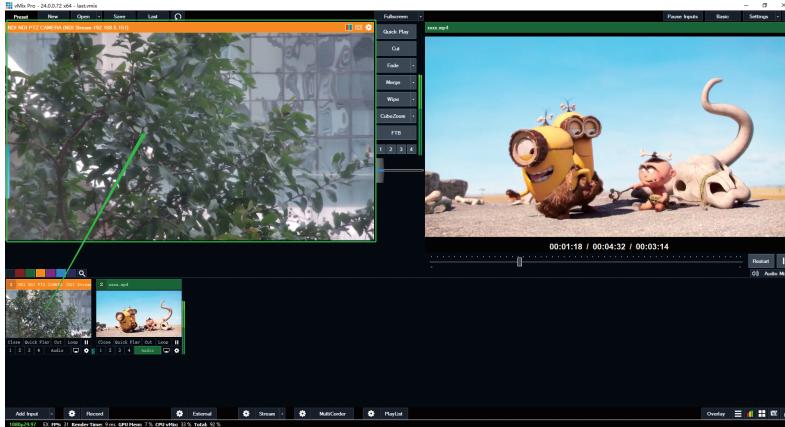

4. When NDI signal source of the camera is in VMIX PGM window, tally light is red.

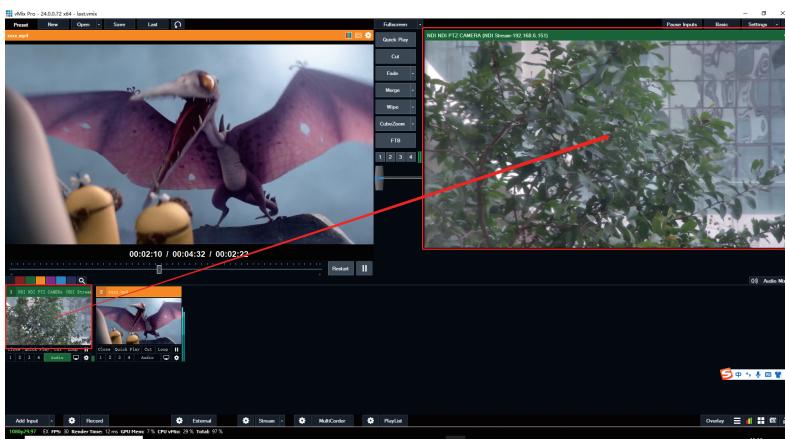

Technical parameter

Due to the continuous iteration of the product, if there is any parameter change, it is subject to the actual product.

12G-SDI Version	
Image Sensor	SONY 1/1.8" CMOS
Effective Pixels	8.5 Megapixels
Resolution	HDMI/12G-SDI:4K60/59.94/50/30/29.97/25, 1080p60/59.94/50/30/29.97/25, 1080i60/59.94/50, 720p60/50 3G-SDI:1080p60/59.94/50/30/29.97/25, 1080i60/59.94/50, 720p60/50 USBMJPEG:3840*2160, 2560*1440, 1920*1080, 1280*720, 960*540, 800*600, 720*576, 720*480, 640*480, 640*360, 352*288, 320*240 USBUYV2:1920*1080, 1280*720, 960*540, 800*600, 720*576, 720*480, 640*480, 640*360, 352*288, 320*240
Signal	PAL/NTSC
Lens	25X optical zoom
Focal Length	f=7.1mm(W)~171.95mm(T)
Horizontal View Angle	59.2°(W)~2.5°(T)
Focus System	Auto/Manual
Minimum Illumination	0.1Lux
Exposure Control	Auto/Manual/Shutter priority/Iris priority/Bright priority
Shutter	1/50s ~ 1/10000s
Gain	Auto/Manual
White Balance	Auto/Manual/Indoor/Outdoor/Onepush/ATW/Color Temp
Image Effect	Full color/Image flip/mirror
S/N Ratio	≥50db
Pan	-171°~+171°(0.1°/S~120°/S)
Tilt	-30°~+90°(0.1°/S~120°/S)
Video Output HD	HDMI、12G-SDI、3G-SDI、USB 3.0、IP(NDI optional)
Power	12V DC(10.8~13.0V DC)
Protocol	SONY VISCA、PELCO P/D、VISCA over IP、ONVIF
Control Mode	RS-232、RS-422/485、IP、UVC
Size	(W)158*(D)193*(H)208mm
Weight	2000g
Color	Black/White (optional)
Accessories	Power adapter, IR Remote, User manual, HDMI cable, USB3.0 cable, RS-232 cable, Bracket

Technical parameter

Due to the continuous iteration of the product, if there is any parameter change, it is subject to the actual product.

3G-SDI Version	
Image Sensor	SONY 1/1.8" CMOS
Effective Pixels	8.5 Megapixels
Resolution	HDMI:4K60/59.94/50/30/29.97/25, 1080p60/59.94/50/30/29.97/25, 1080i60/59.94/50, 720p60/50 3G-SDI:1080p60/59.94/50/30/29.97/25, 1080i60/59.94/50, 720p60/50 USBMJPEG:3840*2160, 2560*1440, 1920*1080, 1280*720, 960*540, 800*600, 720*576, 720*480, 640*480, 640*360, 352*288, 320*240 USBYUY2:1920*1080, 1280*720, 960*540, 800*600, 720*576, 720*480, 640*480, 640*360, 352*288, 320*240
Signal	PAL/NTSC
Lens	25X optical zoom
Focal Length	f=7.1mm(W)~171.95mm(T)
Horizontal View Angle	59.2°(W)~2.5°(T)
Focus System	Auto/Manual
Minimum Illumination	0.1Lux
Exposure Control	Auto/Manual/Shutter priority/Iris priority/Bright priority
Shutter	1/50s ~ 1/10000s
Gain	Auto/Manual
White Balance	Auto/Manual/Indoor/Outdoor/Onepush/ATW/ /Color Temp
Image Effect	Full color/Image flip/mirror
S/N Ratio	≥50db
Pan	-171°~+171°(0.1°/S~120°/S)
Tilt	-30°~+90°(0.1°/S~120°/S)
Video Output HD	HDMI、12G-SDI、3G-SDI、USB 3.0、IP(NDI optional)
Power	12V DC(10.8~13.0V DC)
Protocol	SONY VISCA、PELCO P/D、VISCA over IP、ONVIF
Control Mode	RS-232、RS-422/485、IP、UVC
Size	(W)158*(D)193*(H)208mm
Weight	2000g
Color	Black/White (optional)
Accessories	Power adapter, IR Remote, User manual, HDMI cable, USB3.0 cable, RS-232 cable, Bracket